

# INSTRUCTIONS FOR SLIK-STIK™



### Battery Charging

Unfold the crank handle and rotate at 2 turns / second (either direction is fine). 1 minute of winding will provide approx. 6 minutes of light.

Connect the charger lead to the Charger Socket and then plug the charger into a mains supply socket. It is fine to leave Charger connected for prolonged periods, but the battery will be fully charged after 1½ hours. A full charge will give around 2½ hours of light time.

**Charge Indicator Lamp**

**Charger Socket**  
DO NOT use any other charger than the one supplied with this product.

### Height Adjustment

Press

Push in the sprung button, and slide the telescopic shaft to the desired length. **For your safety**, make sure the button has fully engage into the appropriate hole.

### Cleaning

Use only a moist cloth with a little washing-up liquid to clean. **DO NOT** use any kind of solvents or cleaning fluids.

### ATTENTION!

1. For your safety, **ALWAYS** ensure that the lower shaft is **FULLY** inserted into the upper shaft when using the Slik-Stik.
2. Make sure the black nylon shock absorber is pushed firmly over the joint for best operation.

This BAYLIS Slik-Stik™ provides practical, stylish, and highly convenient use indoors or outside. The simple press-button light provides good floodlighting for the way ahead, and the red flashing strobe lights in the shaft add greater safety when walking in hazardous areas. The onboard Siren Alert enables the user to attract attention in emergencies - and if the internal battery is low, simply crank it up thanks to the built-in BAYLIS generator. Further convenience is added by inclusion of a handy wrist-strap, a folding shaft design, and a useful pickup magnet on the handle - just in case you drop those keys!